



Özkan

POMPA SANAYİ

GK

SERİSİ POMPALAR İÇİN
ÇALIŞMA VE SERVİS
KILAVUZU

**KULLANIM
KILAVUZU**

GK type

OPERATION AND
SERVICE MANUAL FOR

**USER
MANUAL**

TÜM HAKLARI SAKLIDIR
© COPYRIGHT



ENGLISH INTRODUCTION AND USER MANUAL

TABLE OF CONTENTS

General Warnings	1
Safety Instructions	2
Application Areas	3
Shipping and Storage	4
Transportation	5
Storage	6
Installation	7
Electrical Connections	13
First Operation	15
Lubrication Control	17
Dismounting of Pumps and Repair	18
Pump Cross Section Drawing	19
Spare Parts	20
Failures and Troubleshooting	21
Tightening Moments	23
Noise Level	24
List Indicating Service Stations	25



GENERAL WARNINGS ABOUT USER MANUAL

Aim of this user manual is;

- To convey instructions about installation, maintenance and repair of pump, and to explain start, operation and stop methods of pump.
- Absolutely keep this manual in a secured place to be accessed easily by official who is responsible for safe operation and maintenance of pump.
- Pump should not be operated under conditions which are not mentioned in purchase order. Because, operational conditions which are given in purchase order are considered at material selection and trial.

ÖZKANPOMPA does not accept any warranty conditions for all kind of changes and repair operations which are performed by user and unauthorized people.

- Instructions in this manual should carefully be examined and applied in every installation and operation process of pump for preventing misuse.
- Responsible Personnel should be experienced and have knowledge about related standards.
- If it is necessary to operate pump under conditions out of the ones those are mentioned in purchase order, please contact with ÖZKAN POMPA authorized service. ÖZKAN POMPA shall not be liable for damages which occur because of operation under conditions out of mentioned ones without written permission of service.
- If carried pumps shall not be installed immediately, it should be kept in an environment where temperature and humidity does not change so frequently. If appropriate precautions are not taken, very high temperatures and low temperatures and humidity may severely damage pump.
- User is responsible for control and installation to be performed by authorized personnel who have read and examined this user manual.

This user manual does not cover safety rules to be applied in usage area.

Usage time for pumps which is determined and announced by Ministry is **5(five)** years.



SAFETY INSTRUCTIONS

- You should absolutely obey the following safety instructions.
- Never touch the pump and pipes having temperature more than 80 °C. Necessary precautions should be taken for warning users. (E.g Warning signs and signboards)
- Never operate pump in reverse direction.
- Do not walk over pump or pipes which are connected to pump.
- Any operation which will be done in pump should be performed by at least two staffs.
- No works should certainly be done over without stopping pump group.
- Power coming to pumps should be off and you should be sure that it will not operate again before you make any work
- Absolutely install the safety guards which were dismantled before after work in pump has finished.
- Tensions and cricks in pipe system absolutely should not reach to pump.
- Do not make any operation while pump and pipes which are connected to pump are under pressure.
- Cloths of personnel who will work over should be suitable and/or they should use safety equipments.
- Never do any operations when pump is still hot.
- Electrical connection related with pump and auxiliary equipments should be suitable with local rules and made by authorized personnel.
- Operate pump with only specified conditions.
- Do not insert your hand and fingers into holes and spaces over pump body.
- Be always careful while working with pumps discharging hazardous liquids.

TECHNICALLY DIFFERENT PORPERTIES of GK SERIES PUMPS

This series of pumps do not have any shape and appearance difference, technical differences are given below.

***GK SERIES PUMPS** have triphase and monophase motors, horizontal shafted, radial separable scroll cased, single staged, suction from edge, have **closed impeller**, monoblock, frame coupling connected, can be installed from behind and they are centrifugal pumps.




Impellers of GK series pumps are closed impellor

Usage Areas of Hot Oil Pump

Pumps are suitable for discharging liquids which are low viscose, whose flow temperature is up to 320 °C and which are clean or a little dirty. (Max20mg/dm³) In addition to others; main application areas are:

- Chemical and Petrochemical Plants
- Asphalt and Bitumen Processing Industry
- Food and Medicine Factories
- Textile and Leather Industry
- Woodworking and Furniture Industries
- Heat Transfer Facilities Above 100 °C

Explanation of Pump Codes

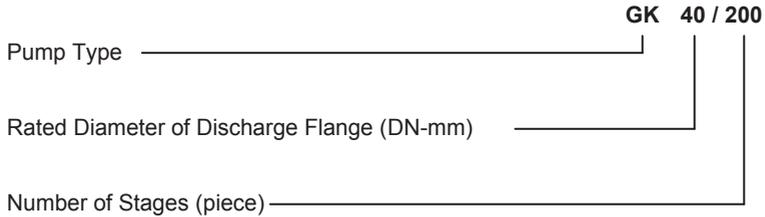

Technical information

Speed : 1450-2900 rpm

Discharge Flange : DN 32 ...DN 150 mm

Suction and Discharge Flanges :TS ISO 7500-2/PN16,DIN2533/PN16

Operational Temperature : 320°C

Ambient Temperature (Maximum) : +40°C

Body Pressure : 16 bar

Isolation Class : F

Protection Class : IP55

Motor Connection : 3 Phase=380V-50Hz / 1 Phase=220V-50Hz

Motor Options (Optional) : Special Voltage Special Frequency

SHIPPING of PUMPS

- Check whether all materials in delivery list are sent.
- If there is damage during shipping please notify ÖZKAN POMPA Shipping Department and Transportation company.
- If there are missing materials, immediately inform ÖZKAN POMPAShipping Department.
- Check whether packaging is damaged during transportation.
- Please carefully take out packaged pump and accessories (if any). Check whether they are damaged during transportation.
- Özkan is not responsible for any broken material during transportation.Please don't accept your goods if it is broken and inform ÖZKAN POMPA.



CARRYING

General Warnings


Absolutely obey the following rules during transportation.

- Use proper wooden crane, forklift, or hoisting mechanisms for unloading or loading wooden cases, packages, boxes and palettes depending on their weight and volume.
- Wear gloves, hard tip shoes and helmet during carrying works.
- Never stay under hoisting mechanism while loading or unloading pumps.


Pump and Motor Group Loading/Unloading

Before loading/unloading pump group please determined the following properties.

- Please find the lifting points.
- Please consider total weight and centre of gravity.
- Please consider the packaging external dimensions
- During loading/unloading make accelerating and braking operations as it shall not cause any damage for working personnel.
- Load lifting capacity should be suitable with pump and pump group weight.
- You should never stay under or near lifted load.
- Pump should be hoisted as it is indicated in **Figure 1-1 and Figure 1-2** for not causing any damage in pumps. Motor hanging ring should absolutely not be used while lifting complete group.
- Load should be kept in lifted position more than required time.
- Pump and pump group should always be lifted and carried in horizontal position

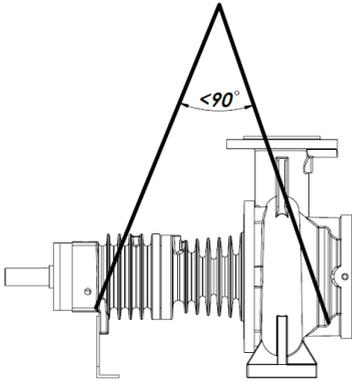

(Figure 1-1) Only Pump

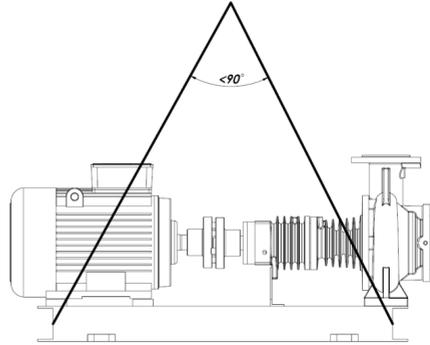

(Figure 1-2) Motopump with frame

STORAGE

- If pump group is not immediately installed, it should be stored in a place which is clean dry and does not include freezing and explosion risk.
- If pump bearing are type which should be greased, they should be extra greased for preventing entry of moisture to bearings around shaft
- Pump should be protected from moisture, dust, dirt and foreign objects by covering with suitable material.
- Pump shaft should be rotated a few turns (e.g once a week) for preventing pitting around pump bearing surfaces and jamming of shaft.

INSTALLATION

Installation of pump to its place and connection setup should only be done by expert personnel. Failed installation and pump ground may cause failures.

This situations are not covered with warranty

- If pump is purchased as single pump (without motor and chassis); a proper frame should be constructing for putting this group over it. Frame to be constructed should have dimensions and robustness which will not permit vibration and shape defects.
- If pump is supplied without motor (Pump + frame), proper motor should be selected prior start to installation of group.

Following properties should be considered during motor selection.

- Maximum power of pump (in all operation ranges)
- Operational revolution of pump shaft
- Necessary power supply
- Motor Type
- Motor connection type (footed, flanged, horizontal, vertical etc.)

Coupling (clutch) setup is obtained by pump and motor having identical axis. All parts of pumps mainly pump and motor bearings may have damage because of vibration caused by unadjusted coupling.

Before start to pump installation

- Protecting parts in discharge and suction flanges should be removed and cleaned well.
- Pump should be installed in a places which does not have freezing or explosion risk and have well air conditioning.
- There should be enough space around pump for accessing pump easily and for maintenance operations and there should be sufficient height and space for lifting pump if necessary.
- Pump suction pipe should be as short as possible.
- You should be carefully work at pump installation ground preparation and installation of pump group into its place. Incorrect and careless installation causes early wearing of pump parts and failures.
- Pump ground should be so heavy to absorb vibrations and sturdy to prevent bends and adjustments defects. Ground concrete should completely be solidified, completed its plug time and proper stud bolts are placed in pump frame fixing holes and proper fixing lugs should be placed for using in making connections with welding. Concrete and plate upper surface should be horizontal and very smooth.

Installation

Installation of pump group to ground by anchoring stud bolts:

- Pump group is placed to center the stud bolt slots which are opened in ground concrete.
- Anchoring stud bolts are inserted through fixing holes over pump frame fixing holes and places into their slots.
- Pump group is placed over base concrete. Liquid balance is placed over pump discharge flange and horizontality of pump is controlled. If there is a horizontal imbalance in pumps position, steel wedges are put under frame and balance of pump group is obtained.


- Nuts of anchoring stud bolts are installed.
- Anchoring stud bolt holes are filled with concrete grout.
- Anchoring stud bolts are reciprocally tightened.
- Coupling setup is controlled in this situation.
- Concrete is poured into pump frame. Joining of poured concrete and ground concrete is cared.
- Complete binding of concrete is controlled and anchoring stud bolts are reciprocally tightened.
- Coupling adjustment is again controlled with template. If there is maladjustment, coupling adjustment is made again.
- Discharge and suction flange fixings of pump are controlled again. If there are unnecessary strains and cricks they are eliminated.
- Coupling guards are placed after coupling adjustment.

:Installation of pump group with concrete fixing plug :

- Pump is placed into ground concrete or the ground to be installed carefully.
- Pump group frame fixing holes are marked to concrete. Pump group lifted again.
- Marked places where fixing plugs will be placed are drilled carefully according to standards.
- Fixing plugs are carefully placed into drilled places.
- Steps for installation with anchoring stud bold are made here with same order.

Clutch Adjustment

- Most important factor in operation of pump group without problem is the correct adjustment of clutch setup. Basic reason for many problems such as vibration, noise, bearing warming is lack of adjustment or not proper adjusted clutch. Therefore clutch setup should be done well and frequently controlled.
- Making clutch with flexible materials does not mean that it is a part which will correct a bad adjustment

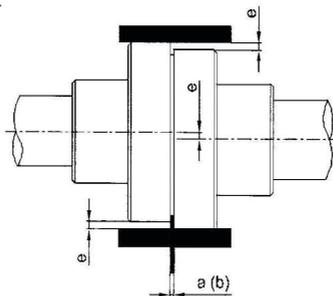

(Figure 2) Clutch Adjustment

-“ **Clutch Setup**” is to provide motor and pump rotational axis over in straight line If GK/MKF/TAP type motors are ordered with motor and frame, necessary clutch adjustments are made in our factory. However, adjustment can have failure during carrying, storage and installation. Make a clutch adjustment discarding the adjustment made in our factory.

- Two pieces of suitable length of smooth sided template, or steel ruler and a precise caliper is necessary for clutch setup. (More precise tools should be used for more precise adjustment)

- Two types of failure may occur during adjustment


a) Angular Failure

b) Parallel Shifting failure


- Distance between two parts of clutch are mutually measured in vertical and horizontal plane

- Distance which were measured between those four points should be equal.


- A smooth edged template is pressed parallel with one part of clutch and position of template with respect to other part is observed. Template should contact with both parts same time and with whole edge.

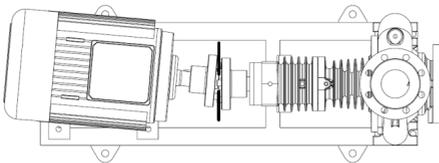


(Figure 3-1) Angle Error in Horizontal Plane

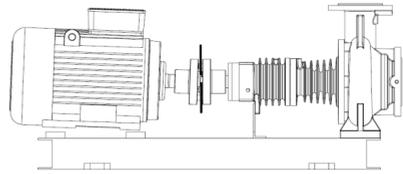

(Figure 3-2) Angle Error in Vertical Plane

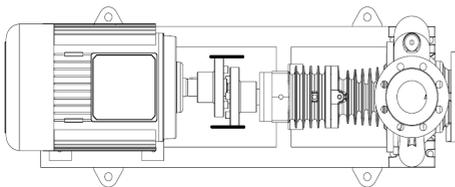

(Figure 3-3) Parallel Sliding Error in Horizontal Plane

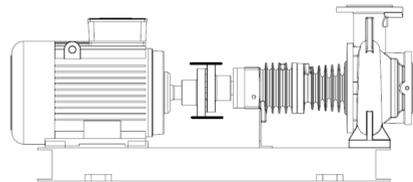

(Figure 3-4) Parallel Sliding Error in Vertical Plane

This operation should be performed in reciprocal two places in horizontal and vertical plane. Adjustment errors can be in horizontal and vertical plane. Errors in vertical plane are eliminated by putting thin steel sheets under feet of pump or motor, errors in horizontal plane are eliminated by making adjustments in spaces of fixing holes or sliding motor in horizontal plane.

- Form and order of clutch adjustment are displayed in **Figures 3-1,3-2,3-3 and 3-4.**

ATTENTION: Adjustments should be checked after changes. Because an adjustment which is made in one direction may make other adjustment in other direction faulty.

Installation of Pipe Equipment

Never use the pump as an anchorage point or as a carrier for the piping.

-The pipelines should be supported very near the pump. It must be checked that any weight, stress or strains on the piping system should not be transmitted to the pump. Therefore after completing the piping installation, the bolt and connection on the suction and discharge nozzles must be loosened to ensure that there is not any stress on the piping system transmitted to the pump. The piping-induced forces and moments acting on the pump nozzles (e.g. due to torsion and/or thermal expansion) must not exceed the permissible forces and moments given in section K. An excessive, impermissible increase in the pipeline forces may cause leaks on the pump where liquid handled can escape into the atmosphere. Danger of life when hot liquids are handled.

-The nominal sizes of the pump suction and discharge nozzles are no guide to the correct sizes of the suction and discharge piping. The nominal bores of the pipes should be same as or greater than those of the pump nozzles. Never use pipes or accessories which have smaller bore than the pump nozzles.


-Pipe joints should be by means of flanges with flange gaskets of proper size and material. Flange gasket must be centered between the flange bolts in a such way that there is no interference with the flow of the liquid.

-Thermal expansions of the pipework and excessive vibrations should be accommodated by suitable means so as not to impose any extra load on the pump (Fig. 4)

-The suction piping must not present any features likely to promote the formation of air pockets. Therefore the suction piping should have a slight downward slope towards the pump (Fig. 4)

-An isolating valve should be installed in the suction pipe as close to the pump as possible. This valve should always remain fully open while the pump is running and must not be used to regulate the flow (Fig. 4)

-A control or shut-off valve should be installed in the discharge pipe, as close to the pump as possible, to

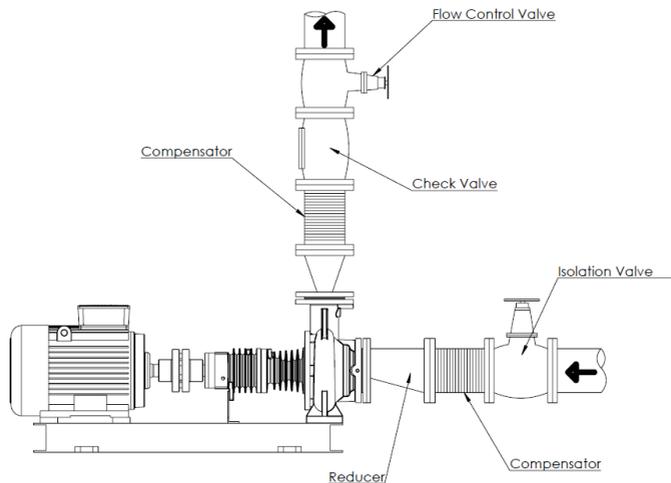

(Figure 4)

Auxiliary Pipe Connections and Accessories

Depending on the practice auxiliary pipe connections (necessary seal, cooling, seal washing, liquidating, drain, etc and/or) pressure gauge, temperature gauge connections can be used for controlling operational conditions.

- Pressure or vacuum gauges should be installed sturdy in measurement points which are over flanges or very close to flanges by means of estimated 8 mm pipes which are bended in spiral form. Air taking valves should be used for devices to operate safely and precisely.
- There are connection places in every pump for discharging pump and removing leakages in seal bed. **(Fig. 5)** Those connections can be connected to discharge tank by means of pipes if requested. There should be isolation valve in pipe which is used for pump discharging and this valve and pipe should be suitable with maximum operational pressure of pump.
- Seal cooling, liquidating and washing pipes should be connected to correct places over pump body which are specified for them.

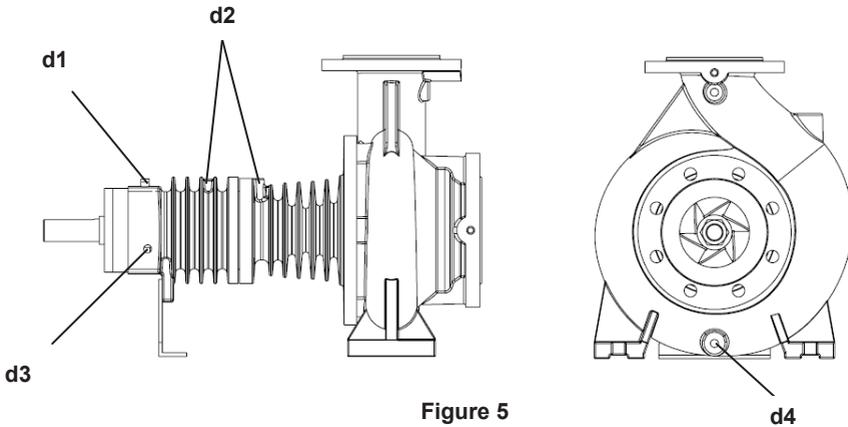


Figure 5

- d1:** Air Venting plug
- d2:** Grease Nipple
- d3:** Grease Drain Plug
- d4:** Drain Plug

By-Pass Valve Connection

- A by-pass valve should be placed over discharge pipe just after pump and before adjustment valve or outlet flange of pump if there is a case that pump will operate in conditions that pump discharge valve is completely closed (that is with zero flow rate) or almost closed (that is with very small flow rate). If such valve is not used and pumps operate with closed valve for a long time, power which is provided by motor will completely transform into heat energy and pass into discharged liquid. This may cause over heating and abnormal failures in pump.




ELECTRICAL CONNECTIONS

- Electrical connections should be done by authorized electricians. National instructions, regulations and instructions of motor manufacturers should be obeyed.
- Power cables should absolutely be installed as not having contact with pipe installation, pump and motor body.


- Motor shaft should be rotated by hand before making electrical conditions to control whether it rotates easily.
- It is recommended to use PTC(Passive Thermal Control-Thermistor) in motors. However usage of those depends on customer. If PTC is used ends of those should be connected to motor terminal box and later should be connected to PTC control device in motor control panel.
- Electrical motors should be protected against overloading by circuit breakers and/or fuses. Circuit breakers and/or fuses should be selected with respect to full load values those are written in nameplate on motor.
- Compare and control voltage, ampere and frequency values which are given in motor nameplate with line values.
- Motor connection scheme can be found in motor terminal box or in handbook.
- Motor electrical connections should be done according to local Electrical Regulations and grounding connection should absolutely be done.
- Protection class of motor body and control system cases in pump should be at least EN 60029 IP 22. In addition to this, protection class of motor bodies and control systems in pump group should be determined according to operational and environmental conditions.
- Safety precautions which are determined in "Safety Instructions" should be applied. All power connections should be disconnected before starting to any work.
- Motor connection type changes according to motor mains power and connection type. Necessary connection types of jumpers in terminal box are displayed in **Table 1 and Scheme 1a-1b and 1c**

Start Type	Motor Power PN<4kW	Motor Power PN >4kW
	Mains Power 3~400V	Mains Power 3~400V
Direct	Y-connection (1b)	Δ-connection (1a)
Y/ Δ Star Delta	Impossible	Remove Jumpers (1c)


Table 1

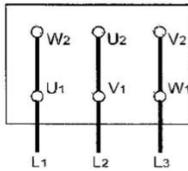

Scheme 1a

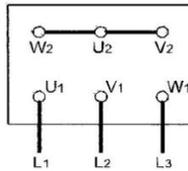

Scheme 1b

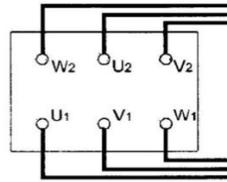

Scheme 1c

Attention! Transition time from star to delta should be short in star-delta connected motors. In case that it is long damages may occur in pump and motors.

Motor Power	Y- Setup time
<30 kW	<3 seconds
>30 kW	<5 seconds

Table 2

- After all abovementioned operations are completed, pump rotor should be rotated a few turns for being sure that it rotates easily.
- All safety guards should be installed into their places. Pump should absolutely be not operated after this operation is made. This is a safety and occupational safety rule which should absolutely be obeyed.

FIRST START

Controls Before Operation

- If there is bottom back flow liquid valve in pump with depth suction; they are filled with liquid from filling hole in highest point and its air is taken.
- This case does not cause problem in force feed pumps. Suction valve is opened if any. Air plugs are loosen and discharge of air and completely filling of pump is provided.
- If system includes vacuum pump, rise of liquid in suction pump by means of vacuum pump and filling pump is provided. When liquid reaches the highest level pump is started.

- Pump bearings are shipped from the factory as being filled with grease which will be enough for one year.
- Before first start of pump, bearings should be checked whether there dirt has entered into it during shipment and installation. If bearings are dirt they should be completely be cleaned and greased again.
- If pump has waited before installation for a long time (more than 6 months), new grease should be inserted into bearings.
- Be sure that there is liquid in liquid tank and/or liquid source
- Be sure that pump and suction pipe is completely filled with liquid.

ATTENTION!

Never let pump run in dry conditions.

Determination of Rotation Direction

- GK type pumps rotates in clockwise direction when you look from clutch towards pump. This direction is shown with an arrow in pump body. Pump is operated for a short while and checked whether it rotates in correct direction. If protection guard is uninstalled during this operation, it should immediately be installed after this operation.

Starting Pump

- Check that suction valve is open and discharge valve is closed.
- Close the circuit breaker and start the motor.
- Wait motor to reach full speed. (Wait motor to pass delta in motors operation with star-delta)
- Observe the ammeter in panel and slowly open discharge valve. (If discharge pipe is empty in first start, do not open discharge valve completely and open in controlled way by controlling that value in ammeter is lower than motor rated values.)
- After valve is completely opened control the value which is read from ammeter whether it is same with the value at operational point. If the ammeter value is less than operational value adjust it by closing the valve. If it is greater check the installation and static height.

ATTENTION: If any of following problems occur while pump operates in nominal speed; pump should immediately be stopped and trouble should be eliminated.

- 1) Pump operates with over vibration.
- 2) Pump and motor connection bearings have over temperature.
- 3) Pressure is not enough.

- Pump bearings are shipped from the factory as being filled with grease which will be enough for one year.
- Before first start of pump, bearings should be checked whether there dirt has entered into it during shipment and installation. If bearings are dirt they should be completely be cleaned and greased again.
- If pump has waited before installation for a long time (more than 6 months), new grease should be inserted into bearings.
- Be sure that there is liquid in liquid tank and/or liquid source
- Be sure that pump and suction pipe is completely filled with liquid.

ATTENTION!

Never let pump run in dry conditions.

Determination of Rotation Direction

- GK type pumps rotates in clockwise direction when you look from clutch towards pump. This direction is shown with an arrow in pump body. Pump is operated for a short while and checked whether it rotates in correct direction. If protection guard is uninstalled during this operation, it should immediately be installed after this operation.

Starting Pump

- Check that suction valve is open and discharge valve is closed.
- Close the circuit breaker and start the motor.
- Wait motor to reach full speed. (Wait motor to pass delta in motors operation with star-delta)
- Observe the ammeter in panel and slowly open discharge valve. (If discharge pipe is empty in first start, do not open discharge valve completely and open in controlled way by controlling that value in ammeter is lower than motor rated values.)
- After valve is completely opened control the value which is read from ammeter whether it is same with the value at operational point. If the ammeter value is less than operational value adjust it by closing the valve. If it is greater check the installation and static height.

ATTENTION: If any of following problems occur while pump operates in nominal speed; pump should immediately be stopped and trouble should be eliminated.

- 1) Pump operates with over vibration.
- 2) Pump and motor connection bearings have over temperature.
- 3) Pressure is not enough.

LUBRICATION

Bearings in ÖZKAN POMPA pumps are designed to be lubricated with grease or liquid oil and having an easy maintenance.

OIL CONTROL

- If pump has waited before installation for a long time (more than 3 months), bearings should be greased. If liquid oil is used in bearings, old oil should be removed and filled with new oil.
- Before running the pump, pump bearings should be checked whether dirt has entered inside it. If there is dirt inside bearings they should completely be cleaned and new liquid oil or grease should be filled.
- Oil filling or adding operations should be determined by enterprise according to conditions in workplace and operation. This method is efficient.
- Pumps which are lubricated with liquid oil are shipped without oil. This type of pumps should be filled with oil up to indicator level before starting to operation.

SAFETY CONDITIONS

- Works should be done by obeying workplace occupational safety rules.
- Inside of pumps should be cleaned after fluid has been discharged from pump.
- Reliability of explosive, poisonous, hot and substances in crystal structure with respect to environment and human health should be assured.
- Considering that used cleaner and protector solvent wastes may give harm to environment and human health; precautions should be taken for preventing dissipation to environment and mixing to suction pool. Accumulation and putting the used waste solvents in disposal area should be cared.
- Working area where dismounting and installation works are performed should be clean.
- Pump should be free of all dangerous materials and be clean during return back.
- Lifting tools and equipments which are suitable with objective and occupational safety should be used in dismounting and installation operations.

DISMOUNTING OF PUMP AND REPAIR

ATTENTION! - Before starting to any operation over pump always disconnect the electrical connections and be sure that it will not run mistakenly. Certainly obey the instructions which are given in "Safety Instructions".

Dismounting of Pump

- Close the isolation valves in suction and discharge pipes.
- Open the fuses of electricity line fuses coming to motor as they will not carry current and remove control cable coming to motor from motor terminal box.
- Open the discharge plug under the scroll case and discharge the liquid inside pump.
- If the liquid inside pump is special, discharge it after taking necessary safety precautions.
- In liquid oil pumps, open discharge plug in bearing bed and discharge the oil.
- Remove coupling and other safety guards.
- Remove pump suction and discharge flanges and auxiliary pipe connections and disconnect pump from pipe system. There is no need in pumps where intermediate partial clutches are used. In pumps where such kind of clutches are used rotor can be taken out without separating scroll case from pipe system.
- Separate motor from pump, (not necessary in pumps with coupling) disconnect pump from frame and take outside.
- Uninstall the bolts which connect roller bearing bed to scroll case.
- Uninstall the bolts which connect seal box to scroll case
- Remove the clutch intermediate part in pumps having coupling. Use the occurred space and take the bearing group and rotor outside.
- Remove the clutch part over pump shaft by means of puller. Remove clutch wedge.
- Uninstall the impellor nut and remove clutch wedge. Use rust solvent if necessary.

Installation of Pump


- Pump installation operation is made by reverse order of pump dismounting process.
- Before starting to installation operation, apply lubricious materials such as graphite, silicone or similar slippery substances over contact surfaces or bolt surfaces. If you can not find those substances use liquid oil.
- Do not use gaskets which you had removed. Use new ones having same dimensions. Be careful that new gaskets and O-rings are in same dimensions.
- Start installation from bearing group. Place the bearing into their places over shaft by using press. Place this part from clutch side towards bed housing. Place the bed covers from two side. Place the seal box and impellor and tighten the impellor nut.
- Connect the rotor group to body.
- Place the pump over the frame, install the motor and connect suction and discharge pipes and auxiliary pipes.

Pumps with Mechanical Seal

- Liquid leakage does not occur in a mechanical seal which properly operates. Mechanical Seal does not need maintenance in cases that it does not have visible liquid leakage. Besides this impermeability of mechanical seal should be regularly controlled.

- Strictly obey the instructions of mechanical seal manufacturers instructions in pumps where mechanical seals are used.

PUMP CROSS SECTIONAL DRAWING

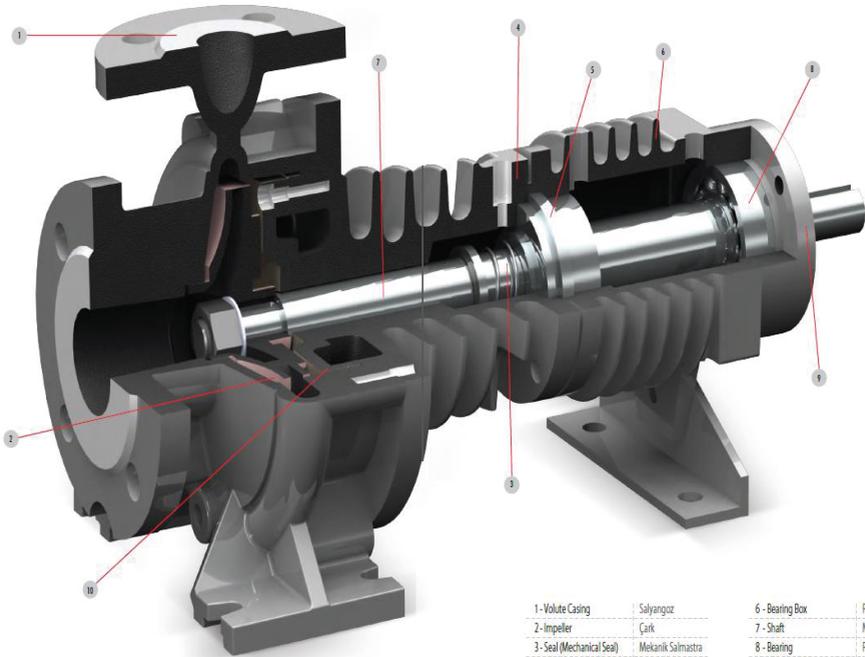

1 - Volute Casing	Salyangoz	6 - Bearing Box	Rulman Kutusu
2 - Impeller	Çark	7 - Shaft	Mil
3 - Seal (Mechanical Seal)	Mekanik Salmastra	8 - Bearing	Rulman
4 - 1/4 NPT Casing Drain Plug	Hava Tahliye Tipisi	9 - Bearing Cover	Rulman Yatagi
5 - Stuffing Box Cover	Salmastra Kutusu	10 - Corrosion Plate	Agrima Plakasi

SPARE PARTS

- ÖZKAN POMPA warrants to provide the spare parts for GK Series pumps for 5 (five) years beginning from production date. You can always easily obtain the spare parts you need.

- In spare parts order, it will be sufficient for you to inform the following values which are written in pump nameplate.

Pump Type : GK 80/200

Motor Power(P) and Revolution(n) : 30 kW - 2900 d/d

Production Year and Serial No : 12/2011 - 201112-001

Flow rate(Q) and Manometric Height (Hm): 125 m³/h - 97 mSS

REASONS FOR FAILURES AND TROUBLE SHOOTING

In this chapter failures which can be seen in GK type pumps, possible reasons (**Table 3**) and trouble shooting methods (**Table 4**) are given.

ATTENTION! Control the accuracy of all measurement gauges before starting to eliminate the failure operation.

FAILURES	POSSIBLE REASONS
Started pumps never discharges liquid	3-6-8-12-11-14
Flow rate decreases or no liquid is discharged	4-2-7-15
Motor is overloading	9-10-16-17-21-28-27
Bearings have over temperature	21-19-20-22-26
There is vibration in pump	13-18-21-25-23
Noise level is high	1-5-24

Table 3

1	There is air in liquid	Swirls occur since depth of submersion pipe is not enough and there fore air is not absorbed. Control the liquid level in suction tank and increase the depth of bottom/suction pipe back liquid valve.
2	Air pocket in suction pipe	Control the slope of suction pipe and whether there are suitable places for formation of air pockets, if any make necessary corrections.
3	There may be air in pump and/or suction line	Fill pump or suction pipe completely with liquid and repeat the start process
4	Air is be absorbed from seal, suction pipe, or connections. Pump absorbs liquid which is mixed with air	Control all connections in suction pipe. Check seals. If necessary feed seals with pressurized liquid. Check the submersion depth of suction pipe pr deep back liquid valve and increase submersion depth if necessary.
5	Pump operates with cavitations	NPSH of plant is very low. Check the liquid level in suction tank. Check whether there are over friction losses in suction line. Check whether isolation valve in suction line is completely open. If necessary place the pump in low levels and increase the load of pump at suction side
6	Suction depth is very much	If there is no obstacle which may cause clogging control the friction losses of suction line. If necessary use a suction pipe having larger diameter. If static suction depth is too much you should raise the height of liquid level in suction tank or pump should be places in lower levels.
7	Increase in discharge height	Check whether valves are completely open. Check whether there is an obstacle which may cause clogging in discharge pipe.
8	Pumps discharge height is insufficient	Actual discharge height of plant is higher than given values. Check the total static height and friction losses of discharge pipe. Using pipes having greater diameter may be solution. Check whether valves are completely opened.
9	Pump is operating at lower discharge height	Discharge height of plant is lower than given values. Lathe the impellor diameter according to manufacturer suggestions
10	Speed very much	Decrease the motor revolution if possible or Lathe the impellor diameter according to manufacturer suggestions
11	Speed very low	Check the voltage and frequency of line and check whether phase is missing in motor.
12	Pump rotates reverse	Check rotation direction of motor whether it is same with the direction which is indicated in pump body or nameplate
13	ImpellEr partially clogged	Clean the impellor

14	Impellor, check valve or filter clogged	Clean Impellor, check valve or filter
15	Impellor, partially filter clogged	Clean Impellor, or filter
16	Mechanical friction in pump	Check whether there are any obstacle or bend in pump rotor
17	Soft seals are over tightened	Loosen the seal bushing
18	Worn or malfunctioned impellor	Replace the impellor
19	Bearing covers are over tightened.	Check the covers and make necessary corrections
20	Flow rate is less than pumps necessary flow rate	Increase the flow rate, use by pass valve or line if necessary
21	Clutch adjustment is broken	Check the clutch rubber and adjust again
22	There is so much grease in bearing	Remove the excess grease
23	Imbalanced rotating parts	Adjust the balance of rotating parts
24	Pump operates out of its operation region	Check the operational region values
25	Shaft is bend	Check the shaft and replace if necessary
26	Insufficient lubrication or lubricant is dirty	Check the amount of lubricant, clean bearing bed and capsules and grease again
27	Motor Failure	Check the motor,. Motor is not suitable for its air conditioning position
28	Density or viscosity of discharged liquid is more than given value	Use motor having greater power

Table 4

TIGHTENING MOMENT

SCREW DIAMETER	MAXIMUM TIGHTENING MOMENT(Nm)	
	CLASS PROPERTIES	
	8.8	10.9
M4	3	4,4
M5	5,9	6,7
M6	10	15
M8	25	36
M10	49	72
M12	85	125
M14	135	200
M16	210	310
M18	300	430
M20	425	610
M22	580	820
M24	730	1050
M27	1100	1550
M30	1450	2100
M33	1970	2770
M36	2530	3560

EXPECTED NOISE LEVELS

Motor Power PN (kW)	Sound Pressure Level (dB)	
	Pump and Motor	
	1450 rpm	2900 rpm
<0,55	63	64
0,75	63	67
1,1	65	67
1,5	66	70
2,2	66	71
3	70	74
4	71	75
5,5	72	83
7,5	73	83
11	74	84
15	75	85
18,5	76	85
22	77	85
30	80	93
37	80	93
45	80	93
55	82	95
75	83	95
90	85	95
110	86	95
132	86	95
160	86	96

* It is the value which is measured from 1 m distance from the pump in a free area over the surface which reflects sound without having sound screen.

LIST DISPLAYING THE SERVICE STATIONS

MANUFACTURER COMOANY'S

Title : ÖZKAN POMPA - Şengül Özkan

**Address : İkitelli Organize Sanayi Bölgesi Tormak Sanayi Sitesi G Blok No:13
İkitelli - Başakşehir / İSTANBUL**

Phone&Fax : +90 (212) 486 17 76 & +90 (212) 486 17 90

Service Scope: Pumps (Waste, clean, liquid, oil, fuel oil, Lpg, Cng)

NO	TITLE	ADDRESS	WEB & E-MAIL	TEL&FAX
1	ÖZKAN POMPA Şengül Özkan	İkitelli Organize Sanayi Bölgesi Tormak San. Sit. G Blok N:13 İkitelli Başakşehir İSTANBUL	www.ozkanpompa.com.tr info@ozkanpompa.com.tr	+90 (212) 486 17 76 +90 (212) 486 17 90

MANUFACTURER COMPANY
ÖZKAN POMPA - ŐENGÜL ÖZKAN

Factort : İkitelli Organize Sanayi Bölgesi Tormak Sanayi Sitesi G Blok No:13 İkitelli-Başakşehir/İstanbul
Tel : +90 (212) 486 17 76 (pbx) Fax: +90 (212) 486 17 90
Web : www.ozkanpompa.com.tr
E-mail : info@ozkanpompa.com.tr



AT UYGUNLUK BEYANI
 EU DECLARATION OF CONFORMITY

ÖZKAN POMPA SANAYİ
 İKİTELLİ ORGANİZE SANAYİ BÖLGESİ TORMAK SANAYİ SİTESİ
 G BLOK NO:13 PK:34306 İKİTELLİ
 BAŞAKŞEHİR/İSTANBUL

Aşağıda tarifi yapılan ve teslim ettiğimiz modeller içerisinde olan ürünlerin tasarım ve tip olarak, Makine Emniyet Yönetmeliği (2006/42/AT) ve Düşük Voltaj Emniyet Yönetmeliği'nin (2006/95/AT) temel emniyet ve sağlık şartlarına uygun olduğunu beyan ediyoruz. Ürün üzerinde tarafımızca onaylanmamış herhangi bir değişiklik yapılması halinde bu beyan geçersiz olacaktır.

The below described and delivered within a models of products as design and types, the Machinery Safety Directive (2006/42/EC) and the Low Voltage Safety Directive (2006/95/EC) is in conformity with the basic safety and health requirements. On the product in case of any modification not approved by us, this declaration will be invalid.

Ürün tanımı Product description	:	SANTRİFÜJ POMPASI CENTRIFUGE PUMPS
Ürünün Ticari Markası Commercial Brand of Product	:	ÖZKAN POMPA SANAYİ
Ürün Tipleri Product Types	:	SLG, SN, SM, SMN, SDL, SD, SDY, MP, MPS, KY, KU, KSU, KD, KM, KMU, KMY, KMYR, PST, PSA, PH, PD, D, DK, GK, TPS, TPK
Uygulanan Direktifler Applicable Directives	:	2006/42/AT Makine Emniyet Yönetmeliği (2006/42/EC) Machinery Safety Directive 2006/95/AT Düşük Voltaj Emniyet Yönetmeliği (2006/95/EC) Low Voltage Safety Directive
Uygulanan Harmonize Standartlar Applicable Harmonized Standards	:	TS EN ISO 12100:2014, TS EN ISO 9935, EN 60204-1
Tarih Date	:	23.01.2015
Ünvan Title	:	Genel Müdür General Manager
Firma Kaşesi Company Stamp	:	



Özkan
 POMPA SANAYİ
 Şişli/ÖZKAN

İkİTELLİ Org.San. Böl. Tormak Sanayi Sitesi G Blok No:13
 Tel: 0212 486 17 76 Fax: 0212 486 17 90
 İKİTELLİ Organize Sanayi Bölgesi Başakşehir/İST.
 İKİTELLİ Organize Sanayi Bölgesi Şişli/İST.

İKİTELLİ ORGANİZE SANAYİ BÖLGESİ TORMAK SANAYİ SİTESİ
 G BLOK NO:13 PK:34306 İKİTELLİ
 BAŞAKŞEHİR/İSTANBUL

Tel : + 0 (212) 486 17 76 Fax: 0 (212) 486 17 90

<http://ozkanpompa.com.tr/> info@ozkanpompa.com.tr



**Kalite İnsana
Saygıdır! Quality is the respect
to Human!**



İkitelli Organize Sanayi Bölgesi Tormak Sanayi Sitesi
G Blok No:13 İkitelli - Başakşehir / İstanbul / TÜRKİYE

Telefon: +90 (212) 486 17 76 (pbx)

Faks: +90 (212) 486 17 90

info@ozkanpompa.com.tr / www.ozkanpompa.com.tr